


EVOR 50'S STYLE TELE
WIRING DIAGRAM

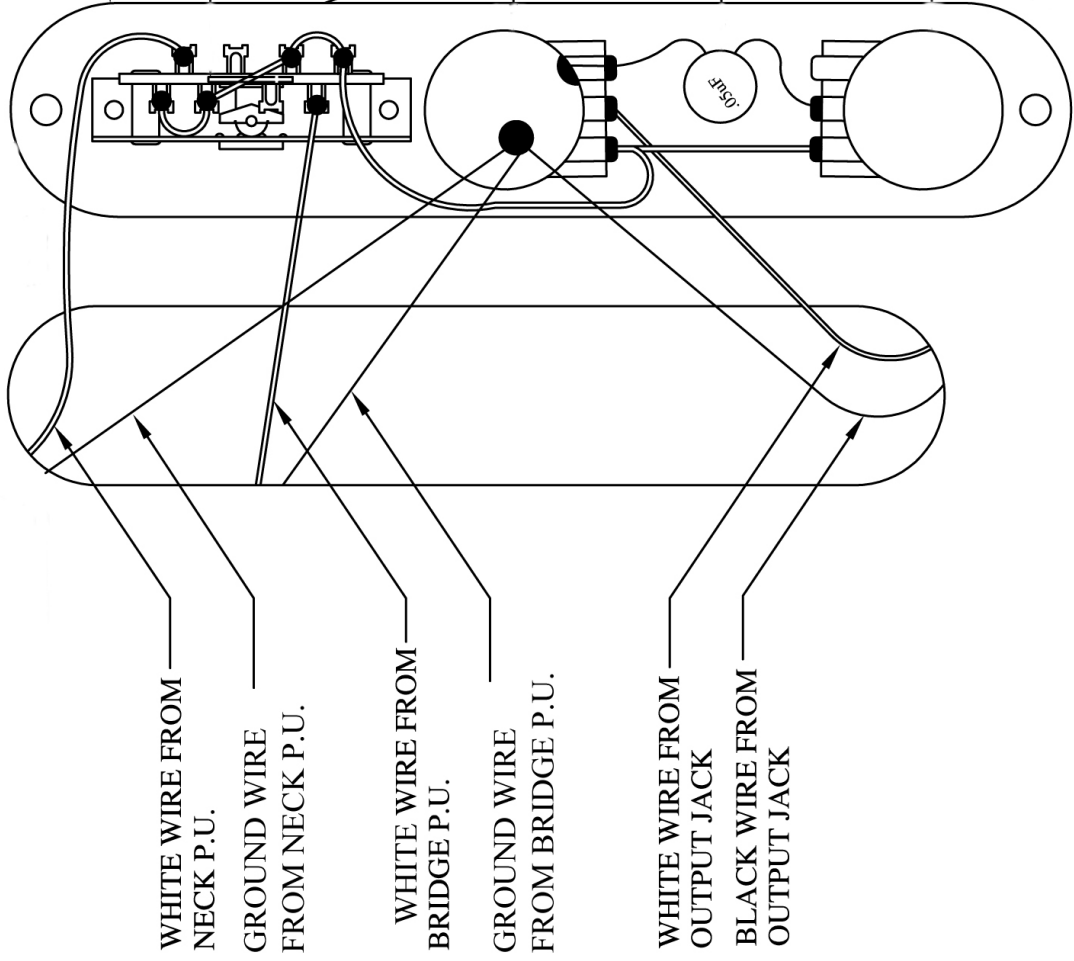

**MAKE SURE ALL GROUNDS
ARE ALL SOLDERED TO
THE VOLUME POT**